
Go-Bike m5 User Manual



Caution: Please read the user manual before riding.

Beginners need to be accompanied by parents or adults to practice cycling in small space. The operator can ride independently only after mastering the kinetic energy and riding skills of the bike.

Bicycle spare parts

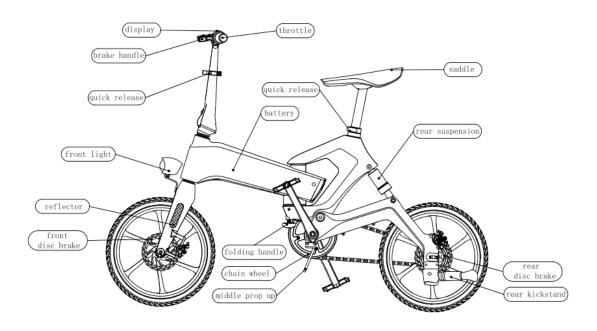

◆ Product folding procedure illustration


1. unfold instruction



Please assemble the bike as shown in photos

Be sure to operate safely during the assembly

2. Folding instruction

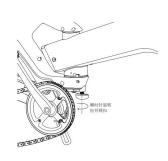

Loosen the buckle below the frame



Folding the front wheel anticlockwise and folding the rear wheel clockwise



Folded

♦ Riding operating instruction

- 1.Hold the handle with both hands and gently twist the key on the right side, When you see the display information show up the power of bicycle is turned on.
- 2. Hold the handlebar with both hands, put one foot on the pedal and the other foot on the road. When you twist the throttle and the bike speeds up you can put the other foot on the pedal.
- 3. If you need to slow down, please use your hand to grip the brake handle when speed slow down to the desired speed, the bike continues to travel at the current speed.
- 4. If you need to stop, please use your hand to grip the brake handle to slow down until stop the foot leaves the pedal to complete the stop.

Safety instructions

- This product is an electric power-assisted bicycle. It is restricted to one person. Children must be accompanied by parents or adults when using
- 2. When riding this product, please wear a safety helmet and other protective equipment.
- 3. Do not ride this product in places where it is unsafe such as motor vehicle highway.
- 4. Do not violate state regulations
- 5. Please practice first in the open, master the operation before driving.
- Do not make dangerous moves or one-handed rides while the bicycle is running. Keep your feet on the pedal.
- 7. Obey traffic signals.
- 8. When encountering rough or uneven road conditions, please slow down or get off
- 9. Users must adjust the height of the product to the proper position to ensure safe driving.
- 10. Do not ride this product on slippery surfaces such as oil or ice on the surface.
- 11. Do not use this product below -5 ° C
- 12. Do not use it in a sloping section over 5 degrees. For use over 5 degrees uphill, you need pedal assist.
- 13. Do not immerse the product in water depths above 5 cm to avoid damage to the electrical parts of the vehicle due to water ingress.
- 14. In the bad weather such as rain, snow and wind, please avoid riding as much as possible to avoid unnecessary damage caused by unnecessary factors.
- 15. If the product is fully charged, it will not be used for at least one month, and it must be charged at least once a month. If it is riding to no electricity (the electricity is exhausted), it must be charged once every 7 days.
- Battery and charger

Lithium battery

- a. When you get the electric bicycle for the first time, please fully charge the battery before use it.
- b. Please charge immediately after the bike emits a low battery warning to avoid damage to the battery and affect your use.
- c. When the battery is not used for a long time, please charge it at least once a month (when the battery is fully charged).

d. If the battery is not used for a long time, the battery level is lower than the battery protection status and cannot be used. Please contact the dealer quickly.

Note: The battery is damaged due to water, collision and other abnormal factors, and is not covered by the warranty.

Charger

- e. The dedicated charger provided by the company has a charging protection function, and when the battery is 100% fully charged, it will automatically stop charging. Damage caused by other abnormal factors such as water ingress, collision, etc., is not covered by the warranty.
- f. Open the charging rubber cover on the pedal and insert the charger output connector into the charging hole.
- g. Plug the charger input power into the power socket (AC100V-240V)
- h. The charger indicator is red, indicating that it is charging; when the charger indicator turns green, the battery is fully charged.
- i. When charging the battery, please place it in a dry and ventilated environment.

Maintenance

1. Wheel

This product tires use wear-resistant and non-inflatable tires. When the tires appear obvious wear or rupture, they need to be replaced in time. Please contact the dealer to replace the original tires. Please check if the bike has loose screws. If it is loose, please tighten it.

2. Battery

The lithium battery charging cycle is at least 500 times, and the normal use can generally reach more than 600 times. When the battery is fully charged, the mileage is only half of the factory mileage, indicating that the battery is aging, it is recommended to replace the new lithium battery.

3. Placement and daily care

Please do not leave the bike for a long time in the hot sun or other heavily wet places; please keep the scooter clean.

◆ The scope of warranty

Under normal use, if the parts of our electric bicycle are in the following order during the warranty period, please contact our company or product distributor, we will provide relevant after-sales service.

Accessories	Quality issues	warranty period	
Motor	The motor does not work under normal use	12 months	
Controller	Controller failure under normal use	6 months	
Charger	Charger failure under normal use	6 months	
Lithium battery	Battery failure under normal use	6 months	

Note: Please use our products in the correct way. The damage and damage caused by parts under abnormal use are not covered by free maintenance.

During the warranty period, if the following reasons cause the failure, the damage is not within the scope of quality assurance:

- a. Not properly maintained and repaired in accordance with this manual
- b. Use the electric bicycle for dangerous actions such as stunts etc, resulting in damage or malfunction.
- c. Any disassembly or use of parts outside the factory.
- d. Body and body parts damaged by mistakes, traffic accidents or accidental collisions
- e. Incomplete label, water, part number mismatch
- f. Driving on an abnormal road to damage or malfunction
- g. Commercial rental or improper use.
- h. The irresistible cause of the natural disaster
- Exposing this product to the sun for a long time or long-term rain, thus causing rapid aging and failure
 of the product.

◆ Package attachment

Attachment	Quantity
M5 Electric bicycle	1
Charger	1
Instruction manual	1

Note: Actual shipment product performance and parameters are subject to change without notice.

Specifications		
Model No.	M5	

Color		Silver & Black
Speed		25-32km/h
Maximum grade		About 5°
Maximum running distance		45 Km
Battery		battery 36V10A
Age		Adults
Charger		36v2A,input 110V-240V (50~60HZ)
Charging Time		About 3-5 h
Motor		400W
Wheel size		16 "*1.95
Dimension		bicycle size
Weigh t	Bicycle size	About 140*57*112cm
	Folding size	About 84*60*63cm
	Net Weight	21KG
Packin	Gross Weight	23KG
g	box + pearl cotton	0.5KG
Package Size		1440*210*730mm